
The patented adjustable screw replaces shimming and can make door hanging a one person job.

Ideal for anything where you need precise adjustments. Windows, Ceilings, Doors, Floors and Cabinets


Easy 4 Step Wood to Wood Installation



1.


fasteners™

THE ORIGINAL

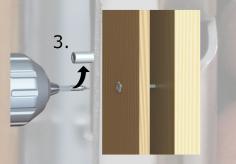


3. For adjustments remove crown from bit.



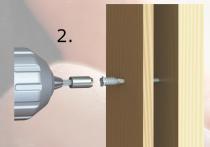


R[™]SCREW

2. Engage crown bit into TopStar™ screw head and drive flush to surface of frame or jamb.

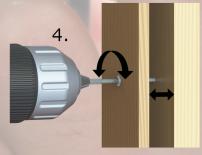

Available in 2-1/2", 3-1/8" and 4" length. (For other lengths please call)

 Engage bit into center hole of TopStar[™] screw head and adjust to your requirements.



TOPSTAR TM SCREW

855-895-7096

u2fasteners.com

info@u2fasteners.com